
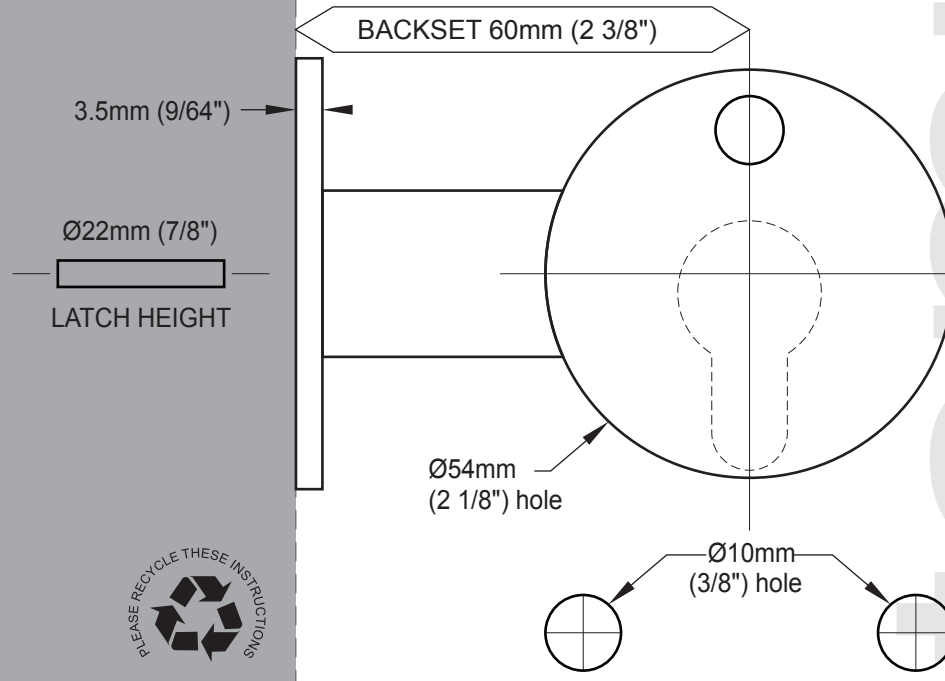


URBAN

TRILOCK
DEADBOLT | LOCKSET | PASSAGE SET

FOLD HERE

Fit here on door edge

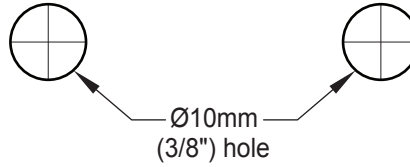

Installation template for Schlage Trilock
URBAN SERIES

Installation template




TEV1DOC01UM1
OCT '17


SCHLAGE

Installation template for Schlage Trilock
URBAN SERIES

template

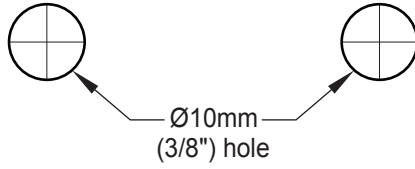

Fit here on door edge

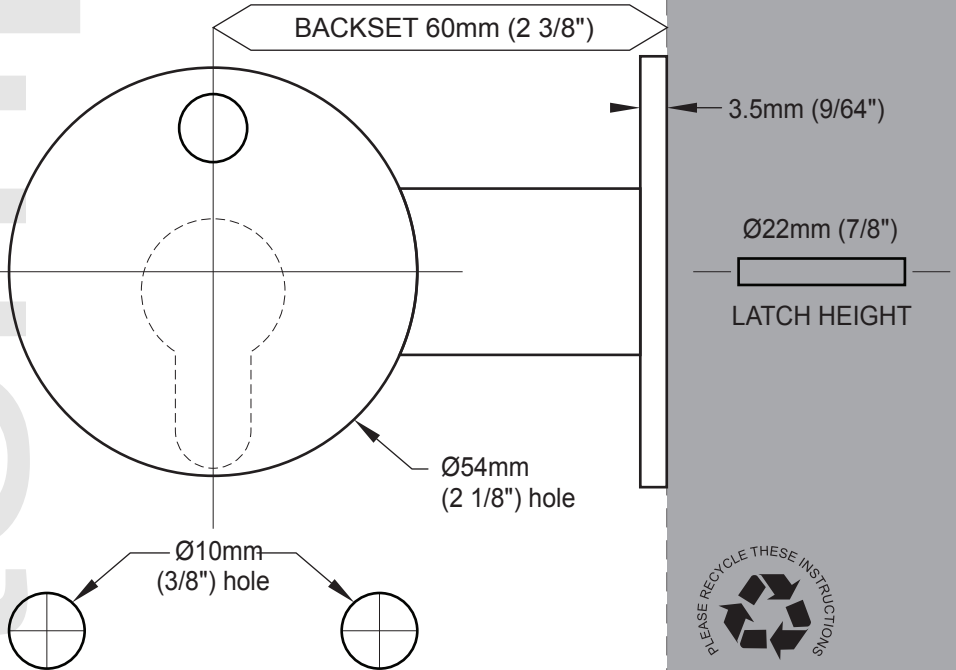

FOLD HERE

URBAN

TRILOCK

DEADBOLT | LOCKSET | PASSAGE SET



TEV1DOC01UM1
OCT '17

ZINC 3849 1017